

STD-09-2 INTERMITTENT NIGHT HEATING WITH OUTDOOR AIR

The unit starts during nighttime at a preset interval and checks the exhaust air temperature. If there is a heating demand, the unit continues to run until the desired temperature is reached. If this function is combined with a room sensor, the unit does not need to start to measure the temperature, as it receives the information directly from the room sensor.

Settings:

Start stpt heating	<i>The temperature that if undershot - starts unoccupied heating.</i>
Heating setpoint	<i>Supply air temperature setpoint during unoccupied heating.</i>
Hysteresis stop	<i>Specify how far above the start setpoint the unoccupied heating is to reach before stopping.</i>