

## CHANGE FAN SETPOINTS

Enter pin 2000.

(Operations) > Unit > Settings air flow > Sply fan st1/st2/st3 and Exh fan st1/st2/st3

Normally step 1 should have the same or a higher value than step 2 and step 2 should have the same or a lower value than step 3.