

CHECK SFP VALUE

Enter pin 2000

If the Energy Watch function is active:
(Operations) > Energy Watch > Fans

If the Energy Watch function is not active:
(Operations) > Unit > Fans > SFP kW/(m³/s)