

## CHANGE FAN CONTROL MODE

Make sure you have the required pressure sensors.

Enter pin 2000 and set the SERVICE SWITCH to Off.

(Operations) > System settings > Configuration > Configuration 1 > Control mode fan > choose control mode > scroll down to the bottom of the page and choose Restart required! and Execute

Do not forget to change setpoints, deviation alarm limits and adjust gain on the loop controllers (pressure control 0,3, flow control 0,03).