

SUPPLY/EXHAUST AIR PRESSURE ALARM UPON START-UP

The pressure values can sometimes behave strangely upon start-up, when the exhaust fan starts before the supply fan, and especially when there is a recirculation unit.

Enter pin 2000

(Operations) > Unit > Inputs/Outputs > Analog inputs > Supply/Exhaust air pressure > set Low limit to -100 Pa and Alarm delay to 60 s.