

NO PRESSURE IN THE AIR DUCT

No or strange pressure values in the supply and/or exhaust air duct.

Check the hoses, supply air duct P1+, exhaust air hose P2-. Ensure that the fans are running and that the pressure sensor is not in alarm mode. Try blowing in the hose and see if the pressure changes in the Climatix.

Make sure that the air duct system is in order and that any fire dampers is in the right mode.