

ALARM HEAT DIFF

A difference in temperature between Hrec supply air temp and supply air temp without heating output signal.

How to find the alarm limit:

Enter pin 2000

(Operations) > Energy Watch > Settings > Alarm heat diff. > High limit

Make sure that supply air sensor is not heated unintentionally.

The alarm detects leakage through the heating valve.