

ADJUSTING THE TEMPERATURE SETPOINTS

Adjusting the temperaure setpoints:

Enter pin 2000

(Operations) > Unit > Settings temperature

Setpoint temp is the basic setpoint from which deadzone and compensations ar based on.

Deadzone is the difference between heating and cooling setpoint.

Supply air comp creates supply air temperature setpoint based on Setpoint temp, if control mode uses summer/winter changeover.

With room or extract air control, you can set min. and max. limits for supply air temperature –
Supply tmp min/max stpt.

Extract/Room Su-Supply Wi explained:

The unit changes control mode depending on outside temperature. Extract/Room control during summer and Supply control during winter. You can also configure a digital input to manually change the season and hence control mode.