

## SUMMER/WINTER CONTROL MODE

Extract/Room Su-Supply Wi explained:

The unit changes control mode depending on outside temperature. Extract/Room control during summer and Supply control during winter. You can also configure a digital input to manually change the season and hence control mode.

Here are the summer/winter settings:

Enter pin 2000:

(Operations) > System settings > Summer/Winter mode

Note that the summer/winter changeover is controlled by a damped outside air temperature (default 1h)! Hence, upon a power failure the unit could restart at damped temperature of 0° (i.e. Winter).