

## CONFIGURE FIRE DAMPERS

Check that there are free inputs and outputs and, above all, supply voltage on the digital output, i.e. control of the fire damper.

Enter pin: 2000 and set Service switch to Off

(Operations) > System settings > Configuration > Configuration 1 > Fire damper > choose One or Two (n.b fire damper groups!) > scroll down to the bottom of the page and choose Restart required! and Execute

If you do NOT want position feedback from the fire dampers:

System settings > Configuration > Configuration 2 > Fire damper fdbk > check FireDamperX No fdbk > scroll down to the bottom of the page and choose Next- scroll down to the bottom of that page and choose Restart required! and Execute

Make sure that the fire damper outputs and inputs are positioned right.

Enter pin: 6006.

System settings > Configuration > Configuration IO's >

Outputs damper > Fire damper DO – set output

Digital alarms > Fire damper fire mode > set input