

ADDING FIRE ALARM 2

Enter pin 2000.

(Operations) > System settings > Configuration > Configuration 1 > Fire alarm > choose Two > scroll down to the bottom of the page and choose Restart required ! and Execute.

Enter pin 6006.

System settings > Configuration > Configuration IO's > Digital alarms > choose an input for Fire alarm 2.

Fire alarm settings:

Unit > Fire

Set fan modes accordingly, do not forget to assign temperature- and filter fire alarms , if present, to the right fire alarm.