

FIRE ALARM AUTOMATIC RESET

Enter pin 2000.

(Operations) > Unit > Inputs/Outputs > Digital inputs > Fire alarm 1 > Alarm config. > check not lock. and choose Done on the bottom of the page