

STF-04 EXTERNAL STOP AHU

Climatix is configured to shut down the unit when the emergency stop digital input is activated.

Once the emergency stop is no longer active, the unit restarts and resumes normal operation.