

STE-03 WATERBORNE COOLING

Climatix is configured to control a valve actuator and circulation pump to control the water flow through a cooling coil. The pump starts on cooling demand and pump kicks periodically during idle periods.

Settings:

Disable by outdoor temp => Outside air temperature under which the cooling cannot start.

Kick interval => Interval between pump kicks.

FlowClgStop => Air flow underneath which the cooling stops.

FlowClgStart => Air flow that needs to be exceeded for the cooling to start.