

STH-S1E-... FIRE DAMPER PLACEMENT, EVACUATION IN DUCT (NO ACTUATOR)

Evacuation damper is shown in flow chart in the wiring diagram. The damper is open during normal operation. In the event of fire alarm or power failure, the damper opens to evacuate smoke gases from the premises

Choose between:

STH-S1A-10	Evacuation damper in supply air duct.
STH-S1A-20	Evacuation damper in extract air duct.
STH-S1A-30	Evacuation damper in supply and extract air duct.