

STZ-01-F-05 PRESENCE SENSOR, ZONE

The presence sensor starts the zone and thus the unit.