

STZ-... ZONES

Choose 1-5 zones. Every zone gets a separate connection box.

Code key for control equipment zone

	STZ-	-aa	-b
Which zone applies:	<div></div>		
01 = Zone 1			
02 = Zone 2			
03 = Zone 3			
04 = Zone 4			
05 = Zone 5			
Total number of zones in the unit:	<div></div>		
1= 1st Zone			
2= 2st Zones			
3= 3st Zones			
4= 4st Zones			
5= 5st Zones			