

STZ-01-C-00-0 SHUT-OFF DAMPER, SUPPLY AND EXTRACT AIR

Shut-off damper controlled by a digital output. Dampers open when the zone starts.