

STM-S HUMIDITY SENSOR

| Article no. | Sensor |
|-------------|---|
| STM-S-1-01 | Humidity sensor supply air |
| STM-S-1-02 | Humidity sensor extract air |
| STM-S-1-03 | Humidity sensor outside air |
| STM-S-1-05 | Humidity sensor room |
| STM-S-2-01 | Humidity sensor outside and supply air |
| STM-S-2-02 | Humidity sensor supply and extract air |
| STM-S-2-03 | Humidity sensor outside and extract air |
| STM-S-2-04 | Humidity sensor outside air and room |
| STM-S-2-05 | Humidity sensor supply air and room |
| STM-S-2-06 | Humidity sensor extract air and room |
| STM-S-3-01 | Humidity sensor outside, supply and extract air |
| STM-S-3-02 | Humidity sensor room, outside and supply air |
| STM-S-3-03 | Humidity sensor room, outside and extract air |
| STM-S-3-04 | Humidity sensor room, supply and extract air |
| STM-S-4-01 | Humidity sensor room, outside, supply and extract air |