

STM-F-01 HUMIDITY FAN COMPENSATION

When humidity (%rH) in the extract air exceeds the setpoint, the fans speed up to increase air circulation.

Article no	Sensor
STM-F-01	Humidity sensor in extract air
STM-F-01-1	Humidity sensor in room